

1. Preset center number(Main user): `pw,123456,center,phone number#`
Example: `pw,123456,center,+8613510460105#`
2. Backup center number:`pw,123456,slave, phone number#`
Example: `pw,123456,slave,+8613800138000#`
3. Preset SOS number: `SOS,no1,sos number# ; SOS,no2,sos number#`
exsample1 :`sos,no1,+8613412345678#`
exsample2 `sos,no2,+8613510460105#`
4. Engine Disable: `relay,1#`
5. Engine Enable: `relay,0#`
6. Location(URL:[web link](#)): `url#`
7. Location(Street Address):`where#` ,this function should be used when GPS device connected with our tracking sever via GPRS.
8. Overspeed alert:`speed,value#` (km/h)
Exsample:`speed,100#` ,means overspeed limit is:100km/h
9. Time Zone and Language: `lang,L,zone,Z#`
L=0 ,means English;L=1 means Chinese;Z= time zone,exsample:Z=+1 means timezone is East +1 timezone,Z=-3 means timezone is West -3 timezone;Exsample:`lang,0,zone,+1#` means:language is in English,and timezone is east +1.
10. Device Status check: `check#`
11. Password Change: `pw,newpassword#` (6 digitals)
exsample:`pw,839222#` ,means Password changed to be: `839222`
12. Factory (Password)Reset: `factory#`
13. GPS Restart: `Reset#`
14. APN Set:
Format1:`apn,apnname#`
Example1: `apn,web.gprs.mtnnigeria.net#`
Format2:`apn,apnname,user,username,pd,password#`
Example2: `apn,web.gprs.mtnnigeria.net,user,unireach,pd,abc123456#`
Format3:`apn,apnname,user,username,pd,password,plmn,value#`
Example3: `apn,web.gprs.mtnnigeria.net,user,unireach,pd,abc123456,plmn,46000#`
15. Set IP/Port(Surl)
Format1: `ip,113.10.245.151,port,8083#`
Format2: `surl,track.feltop.com,port,8083#`
16. Interval time: `upload,sec#` , (10~1800 seconds)
Example:`upload,30#` means GPRS interval time:30s
17. Arm: `fortify,1#`
18. Disarm: `fortify,0#`
19. Stop alarming: `alarm#`